



1.
Winding clockwise
2.
Date setting anti-clockwise
A manual correction is necessary, except for the months with 31 days
3.
Time setting clockwise or anti-clockwise
4.
Start / Stop
5.
Flyback / Reset

Important!

Push the crown in **position 1** for the watch to work