

F.P.JOURNE Invenit et Fecit

OCTA AUTOMATIQUE

USER MANUAL


The only automatic wristwatch which assures accuracy for 120 hours



A unique design based on an exclusive mechanism

F.P.JOURNE Invenit et Fecit

A unique design based on an exclusive mechanism F.P.JOURNE "Invenit et Fecit"

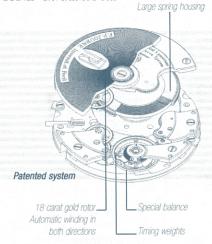

Characteristics:


The Octa Automatique has a special four-arm balance, fitted with timing weights for fast/slow adjustment. It has been carefully timed in our workshops to beat at a frequency of 21'600 alt/hour.

The Anachron spiral has a Nivacourbe final curve and a balanced Nivatronic setting.

This careful adjustment is done exclusively in our workshops and should never be done by anyone else!

An extensive power reserve:

The very supple spring, approx. 1 meter long, develops 13 revs when coiled in its large housing. This mechanism allows for greater autonomy than ever before. The watch keeps accurate time for 5 days. It is an original and exclusive system.

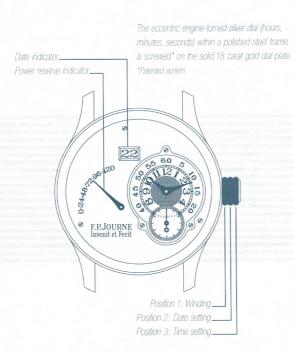

1. Manual winding

- In position 1, turn the crown away from you.
- The watch has a reliable power reserve of 120 hours.
- The power reserve indicator marks the remaining number of hours during which the watch will function at full autonomy.

2. Date Setting

- In position 2, pull the crown out one notch and turn the crown towards you in order to set the date.
- At the end of every month with less than 31 days the date must be reset manually.

3. Time setting

- In position 3, pull the crown out two notches and turn the crown towards you in order to move the hands forward.
- · Never turn the hands backwards.

Maintenance:

Your wristwatch should be thoroughly cleaned every 4 years!

Important:

Keep carefully the original warranty card supplied with the wristwatch. Your retailers will need this identity card for any after sales servicing.

For all maintenance or repair, your wristwatch must be entrusted to an appointed F.P.JOURNE "Invenit et Fecit" agent.

Guarantee:

Your F.P.JOURNE "Invenit et Fecit" wristwatch is guaranteed against any manufacturing defects for a period of 12 months from the date of purchase written on the back of the warranty card.

This guarantee is only valid on presentation of the original warranty card, duly completed by the retailer (serial number, purchase date, retailer's stamp). The guarantee does not include defects or wear resulting from abnormal use of the product or bad treatment (accidents, shocks, modifications...).